





AERO SYSTEM

INSTRUCTIONS

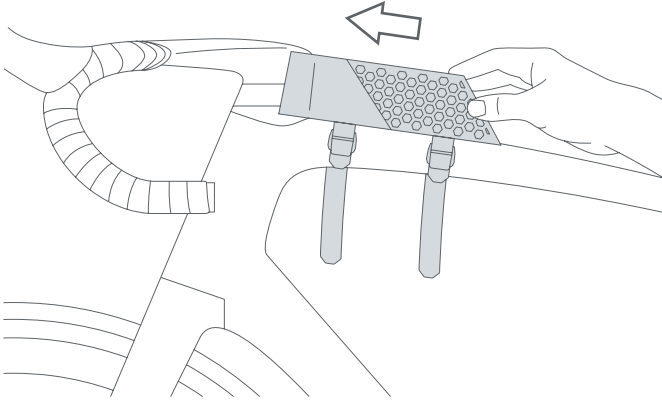


1 - INSTALL THE TOP TUBE MODULE

Position the Top Tube Module so that it sits flush against the back of the stem, applying pressure to allow the Transfer Panel to conform around the back of the stem.
Secure the front Hypalon load strap around the top tube, but leave the rear strap undone for now.

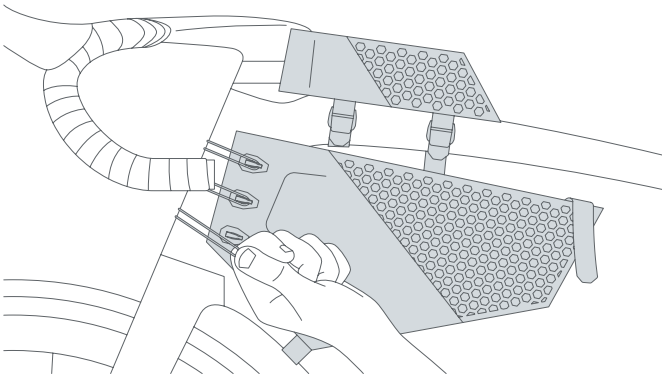


2 - INSTALL THE FRAME MODULE

Position the Frame Module so that it sits against the back of the head tube. Secure the Transfer Panels using the front bungees, followed by the down tube strap.

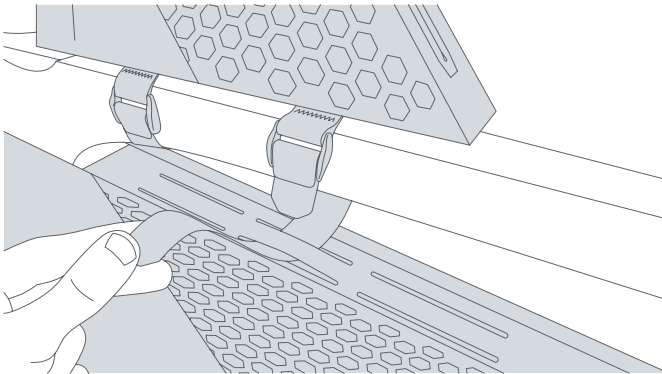

3 - SECURE BOTH MODULES TOGETHER

Pass the rear Hypalon Load Strap from the Top Tube Module through the Frame Module, then tighten and secure it.
Attach the final Hypalon Load Strap at the back of the Top Tube Module and secure it in place.

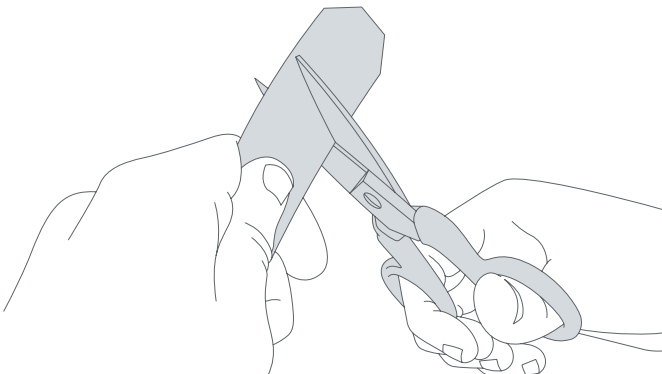

4 - FINAL ADJUSTMENTS

Trim any excess strap length as needed.
Use the strap keepers to tidy up any remaining loose ends.